







Cordless Grass- and Bush Shear

GE-CG 18/100 Li T (1x 2,5Ah)

Item No.: 3410316

Ident No.: 21024

Bar Code: 4006825680829

The Einhell GE-CG 18/100 Li T (1x 2,5 Ah) cordless grass and shrub shears are a powerful member of the smart Power X-Change family. The grass cutting blade (100 mm) is ideal for lawn edges, while the laser-cut and diamond-ground shrub shear blades (200 mm) are perfect for trimming bushes and hedges. The blades can be exchanged without tools. In use, the Softgrip provides perfect handling and ergonomics. The covered gearbox housing protects against accidental contact with transmission oil. Included in the scope of delivery are a telescopic extension for particularly ergonomic appication as well as a 2.5 Ah Power X-Change battery and a charging device.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Grass cutting blade, perfect for caring for lawn edges
- Shrub shear blade for hedge and bush care
- Easy and tool-free blade change
- Laser-cut and diamond-ground blades
- Includes telescopic extension for particularly ergonomic use
- Extension handle with 5 tilt positions
- Covered transmission housing protects against contact with transmission oil
- Softgrip provides optimal grip and ergonomics
- Delivery with 2.5 Ah Power X-Change battery and charging device

Technical Data

100 mm - Cutting width with grass shear knife - Cutting length with shrub cutting knife 200 mm - Cutting thickness with shrub cutting knife

- Spacing between teeth of shrub cutting 8 mm knife

- Accumulator 18 V | 2500 mAh | Li-Ion

- Number of accumulators 1 Pieces

Logistic Data

- Product weight 0 kg - Gross weight single packaging 3.9 kg

- Dimensions single packaging 191 x 136 x 935 mm

- Pieces per export carton 4 Pieces - Gross weight export carton 15.6 kg

950 x 400 x 288 mm - Dimensions export carton - Container quantity (20"/40"/40"HC) 1032 | 2128 | 2376





















Available as special accessories



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962

Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536

Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 **Einhell Accessory**

2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766 **Einhell Accessory**



PXC Battery Mounting Gadget PXC-Battery Accessory Item No.: 4514155 Bar Code: 4006825658774 Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit Item No.: 4512143 Bar Code: 4006825667653 Einhell Accessory



5,2 Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



18V 4Ah PXC Plus Twinpack Battery Item No.: 4511629 Bar Code: 4006825673685 **Einhell Accessory**



18V Battery Charger 3,0A - PXC Charger Item No.: 4514095 Bar Code: 4006825655292 Einhell Accessory



PXC+ 18V 4,0Ah Battery Item No.: 4511553 Bar Code: 4006825660869 Einhell Accessory



PXC 18V 3,0Ah Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory



2,0 Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



4-6 Ah Multi-Ah Power X-Change Plus Battery Item No.: 4511502 Bar Code: 4006825644210



18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory



Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 **Einhell Accessory**



2x 18V 5,2Ah PXC-Twinpack Battery Item No.: 4511526 Bar Code: 4006825656695 Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB Battery Item No.: 4511489 Bar Code: 4006825638578



Power X-Boostcharger 8A Charger Item No.: 4512155 Bar Code: 4006825670554 Einhell Accessory



PXC+ 18V 5-8Ah MULTI Battery Item No.: 4511600 Bar Code: 4006825665055 Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery Item No.: 4511631 Bar Code: 4006825673692 Einhell Accessory



PXC+ 18V 4,0Ah SEALED Battery Item No.: 4511627 Bar Code: 4006825673227 Einhell Accessory



PXC+ 18V 3,0Ah SEALED Battery Item No.: 4511618 Bar Code: 4006825672794 Einhell Accessory



3,0 Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory



4,0 Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory