



## GE-CG 18 Li - Solo

### Cordless Grass- and Bush Shear

Item No.: 3410370

Ident No.: 11016

Bar Code: 4006825614213

The cordless grass and shrub shears GE-CG 18 Li - Solo from Einhell is the ideal partner for hobby gardeners who appreciate flexibility when it comes to keeping their greeneries in shape. For optimum power transmission to the laser-cut and diamond grinded blades there is a robust metal gearing. A grass cutting blade and a shrub shears blade are included. Converting from the grass shears to the shrub shears is quick and easy to do thanks to the special blade change system which requires no tools. A safety switch protects the user from starting the shears unintentionally. The GE-CG 18 Li comes with a soft grip for a firm and yet comfortable hold. This product comes without a battery or charger.

#### Features

- Safety switch
- Metal gearing
- Grass cutting blade
- Shrub shears blade
- Blade change without tools
- Laser-cut and diamond grinded blades
- Soft grip
- Without battery and charger



#### Technical Data

- Cutting width with grass shear knife 100 mm
- Cutting width with shrub cutting knife 200 mm
- Cutting thickness with shrub cutting knife 8 mm
- Spacing between teeth of shrub cutting knife 8 mm
- Number of accumulators 0 Pieces

#### Logistic Data

- Product weight 0.66
- Gross weight single packaging 1.26 kg
- Dimensions single packaging 355 x 115 x 120 mm
- Pieces per export carton 6 Pieces
- Gross weight export carton 15 kg
- Dimensions export carton 370 x 360 x 260 mm
- Container quantity (20"/40"/40"HC) 4320 | 9216 | 10368



## Available as special accessories



18V 5,2 Ah Power-X-Change  
Battery  
Item No.: 4511357  
Bar Code: 4006825598865  
Einhell Accessory



18V 2,0 Ah Power-X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 4,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 3,0 Ah Power-X-Change  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



18V 4,0 Ah Power-X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 3,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512041  
Bar Code: 4006825613698  
Einhell Accessory