



Robot Lawn Mower

FREELEXO CAM PLUS 600

Item No.: 3413975

Bar Code: 4006825678413

The Einhell FREELEXO CAM PLUS 600 is part of the Power X-Change family, which can be combined with each other. Using an integrated camera and sensors, the FREELEXO CAM PLUS 600 can identify the boundaries of the lawn to be mowed by detecting lawns based on colours and structures. In addition, areas can be quickly excluded using magnetic tape. In addition, it is equipped with WiFi for connection to the Einhell Connect app as well as an LCD display and a keypad for programming on the device. The robotic lawn mower is designed for areas of up to 600 m². The scope of delivery includes a 4.0 Ah Power X-Change Plus battery, a charging station and suitable installation equipment.

WER CHANGE

Features & Benefits


- Member of the Power X-Change family, 1 x 18V battery required
- Brushless motor more power and longer running time
- Robot mower recognises mowing area thanks to integrated camera
- Individual robotic lawn mower control via app
- Intuitive keypad and LED display
- Programmable mowing times
- Return to the charging station and automatic charging process
- Safety sensors thanks to impact, tilt and lift sensors
- Integrated rain sensor
- Theft protection via PIN code
- Cutting height adjustment: 20 60 mm
- Suitable for slopes up to 25%
- Incl. 5 m magnetic tape for short-term boundaries in the garden
- Carrying handle for convenient transport
- Lawn areas up to 600 m²
- 25x fastening hooks
- 2x connecting clamps and 3x replacement blades
- Incl. 1x 4.0 Ah Power X-Change Plus battery and charging station

Technical Data

- Power	18 V
- Accumulator	18 V 4000 mAh Li-Ion
- Cutting width	18 cm
- Slope	25 %
 Cutting height adjustment 	20 mm - 60 mm
- Recommended area	600 m ²
- Perimeter wire	0.12 m
- Guide wire	12 m
- Hooks	25 Pieces
- Spare blades	3
- Connecting clamps	2 Pieces





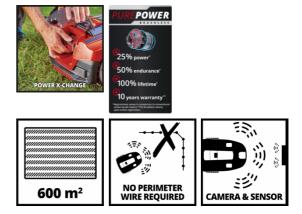

Logistic Data

 Product weight (kg) 	9.5
- Gross weight (kg)	16.74
- Dimensions single packaging	695 x 440 x 315 mm
 Pieces per export carton 	1 Pieces
- Gross weight of export carton	16.74 kg
- Dimensions export carton	700 x 445 x 325 mm
- Container quantities (20"/40"/40"HC)	294 602 688

Available as special accessories



Spare blades 12 psc Robot Lawn Mower Accessory Item No.: 3414020 Bar Code: 4006825648775 **Einhell Accessory**

Connecting clamps 4 psc Robot Lawn Mower Accessory Item No.: 3414022

robot lawn mower garage Robot Lawn Mower Accessory

Bar Code: 4006825654417

Bar Code: 4006825648799

Einhell Accessory

Item No.: 3414024

Einhell Accessory







Repair Kit Robot Lawn Mower Accessory Item No.: 3414026 Bar Code: 4006825657968 **Einhell Accessory**

PXC+ 18V 5-8Ah MULTI Battery Item No.: 4511600 Bar Code: 4006825665055 Einhell Accessory

PXC 18V 3,0Ah Battery Item No.: 4511341 Bar Code: 4006825590593 **Einhell Accessory**

2,0 Ah Power X-Change Battery Item No.: 4511395

Einhell Accessory

Bar Code: 4006825610369





4-6 Ah Multi-Ah Power X-Change Plus Battery Item No.: 4511502 Bar Code: 4006825644210

2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

18V Battery Charger 3,0A - PXC



Charger Item No.: 4514095 Bar Code: 4006825655292 Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 **Einhell Accessory**























18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit Item No.: 4512143 Bar Code: 4006825667653 Einhell Accessory

Perimeter wire 50 m Robot Lawn Mower Accessory Item No.: 3414021 Bar Code: 4006825648782 Einhell Accessory

Fastening hook 100 psc Robot Lawn Mower Accessory Item No.: 3414023 Bar Code: 4006825648805 **Einhell Accessory**

Cleaning Kit Robot Lawn Mower Accessory Item No.: 3414025 Bar Code: 4006825657951 **Einhell Accessory**

5,2 Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory

PXC+ 18V 4,0Ah Battery Item No.: 4511553 Bar Code: 4006825660869 Einhell Accessory

3,0 Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 **Einhell Accessory**

4,0 Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 **Einhell Accessory**

2x 18V 5,2Ah PXC-Twinpack Battery Item No.: 4511526 Bar Code: 4006825656695 **Einhell Accessory**

Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 **Einhell Accessory**





