



Einhell

EXPERT



Power Tool Kit

TE-TK 18/3 Li Kit (JS+CD+AG)

Item No.: 4257241

Ident No.: 21023

Bar Code: 4006825668490

The Einhell machine set TE-TK 18/3 Li Kit (JS+CD+AG) is the perfect equipment for any home workshop. The set includes the powerful cordless drill/driver TE-CD 18/40 Li, the high-performance cordless angle grinder TC-AG 18/115 Li and the handy cordless jigsaw TC-JS 18 Li. All devices are part of the Power X-Change family and can be flexibly operated with all 18 V Power X-Change batteries and chargers. A 4.0 Ah Power X-Change battery, a charger, three saw blades for wood, a cutting disc, a disc sanding plate, a cutting disc guard, a bit set and the Einhell Bag 45/22 as a practical transport and storage bag are also included in delivery.

Features & Benefits

 
 
- Extensive Power X-Change tool set
- Cordless jigsaw TC-JS 18 Li:
 - Smooth running & switchable pendulum stroke for precise cuts
 - Toolless universal saw blade holder
 - With dust extraction function for best visibility
- Cordless angle grinder TC-AG 18/115 Li:
 - Lightweight angle grinder with ergonomic, slim design
 - Additional handle can be flexibly mounted in 3 positions
 - Soft start and restart protection for a high level of safety
- Cordless drill TE-CD 18/40 Li:
 - 2-speed gearbox for powerful drilling and screwing
 - Speed electronics for material- and application-specific work
 - LED light for illumination and ergonomic design with soft grip
- Incl. 1x 4 Ah PXC battery universally suitable for all tools
- Incl. Einhell Bag 45/22 for storage and transport



Technical Data

Logistic Data

- Product weight (kg)	4.96
- Gross weight (kg)	8.2
- Dimensions single packaging	582 x 155 x 310 mm
- Product weight	4.96 kg
- Pieces per export carton	2 Pieces
- Gross weight single packaging	8.2 kg
- Gross weight export carton	18.29 kg
- Dimensions export carton	605 x 330 x 330 mm
- Container quantity (20"/40"/40"HC)	848 1760 2064

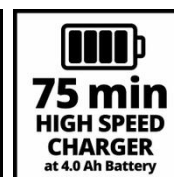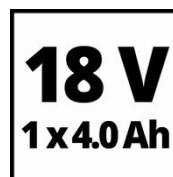

Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



DIA-Trennschleifer dünn 115x1,4 Winkelschleifer-Zubehör
Item No.: 49721150
Bar Code: 4009317211501
Einhell Accessory



10 Trennschei. dünn 115x1,0 Winkelschleifer-Zubehör
Item No.: 49711944
Bar Code: 4009317119449
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



M14 Schnellspannmutter Winkelschleifer-Zubehör
Item No.: 49717705
Bar Code: 4009317177050
Einhell Accessory



5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Stich-Sägeblatt Box 10-tlg. T Stichsägen-Zubehör
Item No.: 49617350
Bar Code: 4009316173503
Einhell Accessory



St-Sägebl.Set 4tg Ho/Met Akku Stichsägen-Zubehör
Item No.: 49625427
Bar Code: 4009316254271
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



3,0 Ah Power X-Change Plus Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



Power X-Caravan Charger 3A Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory

2 Schleifmop 115 K 40/80 Winkelschleifer-Zubehör
Item No.: 49795505
Bar Code: 4009317955054
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



Power X-Boostcharger 8A Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



PXC Battery Protector PXC-Battery Accessory
Item No.: 4140151
Bar Code: 4006825670844
Einhell Accessory



18V 4,0Ah Power-X-Change Plus Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



18V 3,0Ah SEALED PXC Plus A2 Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



18V 4,0Ah SEALED PXC Plus A1
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory