



Einhell

PROFESSIONAL



Cordless Jig Saw

TP-JSD 18/1351 Li BL +10 S-F

Item No.: 4321261

Ident No.: 21015

Bar Code: 4006825687590

The Einhell Professional cordless jigsaw TP-JSD 18/1351 Li BL +10 S-F is part of the powerful, combinable Power X-Change family. The tool is driven by a Brushless motor for extra power and longer running time. Once you register online, the brushless motor has a 10-year guarantee. Its smooth running facilitates precise cuts, while the pendulum stroke can be enabled for quick cuts. The jigsaw is capable of cutting depths of up to 135 mm in wood and 10 mm in steel as well as oblique cuts of up to 45°. It features speed electronics, a cutting line indicator, tool-free saw blade holder and a splinter guard. Comes with 10x jigsaw blades, 1x E-Case S-F, but without battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Brushless motor – more power and longer run time
- Brushless – 10-year warranty on motor after registration
- Exceptionally smooth operation for precise cuts
- Switchable pendulum stroke for quick cuts
- Electronic speed control for optimal tool control
- Toolless saw blade holder
- With dust blow-off function for a perfect view
- LED light to illuminate the area being cut
- Cutting line indicator for precise cuts
- Sturdy aluminium base plate for lower vibration
- Integrated plastic shoe cover protects delicate workpieces
- Parallel guide for precise, straight cuts
- Incl. 1x jigsaw blade for wood
- Incl. 10x jigsaw blade for wood
- Incl. 1x E-Case S-F
- Does not include battery or charger (available separately)




Technical Data

- | | |
|-----------------------------|----------------------------|
| - No-load speed | 0 - 3500 min ⁻¹ |
| - Stroke height | 26 mm |
| - Cutting depth in wood | 135 mm |
| - Cutting depth in plastic | 20 mm |
| - Cutting depth in steel | 10 mm |
| - Max. bevel cuts | 45 ° |
| - Toolless saw blade change | yes |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight | 2.2 kg |
| - Gross weight single packaging | 4.61 kg |
| - Dimensions single packaging | 443 x 130 x 327 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 19.4 kg |
| - Container quantity (20"/40"/40"HC) | 1252 2596 3044 |

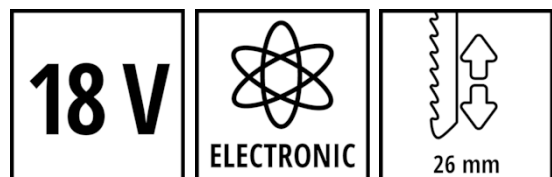

Available as special accessories



E-Case L with wheels
System Carrying Case
Item No.: 4540014
Bar Code: 4006825660562
Einhell Accessory



St-Sägebl.Set 4tg Ho/Met Akku
Stichsäge-Zubehör
Item No.: 49625427
Bar Code: 4009316254271
Einhell Accessory



E-Case M
System Carrying Case
Item No.: 4540021
Bar Code: 4006825667721
Einhell Accessory



E-Case M SEALED
System Carrying Case
Item No.: 4540053
Bar Code: 4006825687071
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



PXC 18V 2,5Ah
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
C1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Stich-Sägeblatt Box 10-tlg. T
Stichsäge-Zubehör
Item No.: 49617350
Bar Code: 4009316173503
Einhell Accessory



E-Case S-F
System Carrying Case
Item No.: 4540011
Bar Code: 4006825653991
Einhell Accessory



E-Case S-F SEALED
System Carrying Case
Item No.: 4540052
Bar Code: 4006825687033
Einhell Accessory



E-Case L with wheels SEALED
System Carrying Case
Item No.: 4540054
Bar Code: 4006825687088
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory

Battery-Running-Times



sawing¹
(m)

One Battery for All

1.5 Ah	11
2.0 Ah	14
2.5 Ah	18
3.0 Ah	21
4.0 Ah	29
5.2 Ah	37
6.0 Ah	43
8.0 Ah	57

Test setup:

1) wood - chipboard 19 mm