



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18/70 Li (1x2,5Ah)

Item No.: 4321280

Ident No.: 21014

Bar Code: 4006825679519

The Einhell TC-JS 18/70 Li (1x 2.5 Ah) cordless jigsaw provides many versatile applications. As a member of the Power X-Change family, it provides flexibility for various jobs. With an idle speed of 2,700 rpm, it enables precise cuts up to 70 mm deep in wood and 8 mm deep in steel. The switchable pendulum stroke always ensures fast cutting progress. The T-shaft sawblade holder enables quick and tool-free blade changes. The dust blow-off function and the dust extraction connection ensure the best visibility when working. Supplied with 1x 2.5 Ah Power X-Change battery, 1x charger, 1x jigsaw blade for wood, 1x suction adapter and 1x hexagon key.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Very smooth operation for precise cutting
- Speed electronics to adapt to the material
- Pendulum stroke function for fast sawing progress
- Tool-free saw blade change
- Dust blow-off function for the best view
- Plastic shoe cover protects delicate workpieces
- Incl. chip breaker for tear-free cutting
- Incl. dust extraction for a clean workplace
- Hexagon key for cutting angle adjustment up to 45°
- Incl. 1 x 2.5 Ah Power X-Change battery and charger



 
 
Technical Data

- Accumulator	18 V 2500 mAh Li-Ion
- Charging time	50min
- Mains supply of battery charger	200-250 V 50-60 Hz
- No-load speed (idle speed)	2700 min ⁻¹
- Stroke height	20 mm
- Cutting depth in wood	70 mm
- Cutting depth in plastic	10 mm
- Cutting depth in steel	8 mm
- Max. bevel cuts	45 °
- Toolless saw blade change	yes
- Number of accumulators	1 Pieces



Logistic Data

- Product weight	2.12 kg
- Gross weight single packaging	3.11 kg
- Dimensions single packaging	243 x 175 x 243 mm
- Pieces per export carton	4 Pieces
- Gross weight export carton	14 kg
- Container quantity (20"/40"/40"HC)	2472 5124 6000

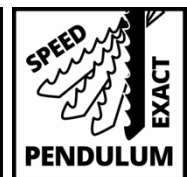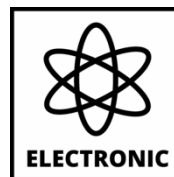

Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



PXC Battery Mounting Gadget PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



Power X-Caravan Charger 3A Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



Power X-Boostcharger 8A Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



PXC Battery Protector PXC-Battery Accessory
Item No.: 4140151
Bar Code: 4006825670844
Einhell Accessory



18V 4,0Ah Power-X-Change Plus Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



18V 4,0Ah SEALED PXC Plus A1 Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2,0 Ah Power X-Change Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



 
2x18V 4,0Ah PXC-Twinpack CB A1 Battery
Item No.: 4511489
Bar Code: 4006825638578



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Stich-Sägeblatt Box 10-tlg. T Stichsägen-Zubehör
Item No.: 49617350
Bar Code: 4009316173503
Einhell Accessory



St-Sägebl.Set 4tg Ho/Met Akku Stichsägen-Zubehör
Item No.: 49625427
Bar Code: 4009316254271
Einhell Accessory



18V 4Ah PXC Plus Twinpack Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V Battery Charger 3,0A - PXC Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory



18V 3,0Ah SEALED PXC Plus A1
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory

Battery-Running-Times



One Battery for All

sawing¹
(m)

1.5 Ah	7
2.0 Ah	9.5
2.5 Ah	11
3.0 Ah	14
4.0 Ah	20
5.2 Ah	30
6.0 Ah	32
8.0 Ah	40

Test setup:

1) wood - chipboard 19 mm