



Einhell

EXPERT



Cordless Chain Saw

GE-LC 18/25-1 Li Kit
(1x3,0Ah)

Item No.: 4501760

Ident No.: 21074

Bar Code: 4006825608335

The Einhell GE-LC 18/25-1 Li Kit (1x 3.0 Ah) cordless chainsaw is a reliable tool for clearing and felling small and medium-sized trees and for processing firewood. The kickback protection combined with an instant chain brake and a chain catcher pin always ensure high user safety. The metal bumper spike guarantees secure guidance, and the ergonomic handle also offers a comfortable grip. Tools are not required for chain tensioning and chain exchanging. The oil tank of the automatic chain lubrication can be easily refilled as needed by utilising the large oil filling opening. The set includes a charging device and a 3.0 Ah battery for all devices in the Power X-Change family.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Tool-free chain tension adjustment and chain exchanging
- Ergonomic handle with Softgrip
- Metal bumper spike
- Quality blade and chain
- Automatic chain lubrication
- Large oil filler opening
- Kickback protection and instant chain brake
- Metal bumper spike
- Delivery with 1x 3.0 Ah Power X-Change battery and charging device



Technical Data

- | | |
|-----------------------|---------|
| - Sword length | 250 mm |
| - Max. cutting length | 23 cm |
| - Chain cutting speed | 4.5 m/s |
| - Oil tank capacity | 200 mL |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 3.7 kg |
| - Gross weight (kg) | 5.3 kg |
| - Dimensions single packaging | 228 x 485 x 250 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 22.5 kg |
| - Dimensions Export Carton | 500 x 380 x 515 mm |
| - Container quantity (20"/40"/40"HC) | 1088 2208 2760 |



Available as special accessories



Spare Bar 25cm 1,1
Chain Saw Accessory
Item No.: 4501753
Bar Code: 4006825607017
Einhell Accessory



Spare Chain 25 cm 1,1 40T 3/8
Chain Saw Accessory
Item No.: 4501754
Bar Code: 4006825607024
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 3,0 Ah Power-X-Change 1
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
A1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory

Power X-Caravan Charger 3A
Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC Battery Protector
PXC-Battery Accessory
Item No.: 4140151
Bar Code: 4006825670844
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



18V 4,0Ah SEALED PXC Plus A1
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory

Battery-Running-Times



sawing¹
(pieces)

One Battery for All

1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200
8.0 Ah	260

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm