



Einhell

EXPERT



Cordless Chain Saw

GE-LC 18/25-1 Li Kit
(1x2,5Ah)

Item No.: 4501789

Ident No.: 21015

Bar Code: 4006825688238

Features & Benefits

- Member of Power X-Change family, needs 1x 18 V battery
- High-quality bar and chain
- Tool-free chain tensioning and replacement
- Ergonomic handle with soft grip
- Solid metal claw stop
- Automatic chain lubrication
- Large oil filling port
- Oil tank with inspection window for chain lubrication
- Kickback protection and instant chain brake
- Chain catch bolt
- Includes 2.5 Ah Power X-Change battery and charger



 
 
 
Technical Data

- | | |
|-----------------------|---------|
| - Sword length | 250 mm |
| - Max. cutting length | 23 cm |
| - Chain cutting speed | 4.5 m/s |
| - Oil tank capacity | 200 mL |



Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 3.064 kg |
| - Gross weight (kg) | 4.718 kg |
| - Dimensions single packaging | 140 x 480 x 245 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 22.5 kg |
| - Dimensions Export Carton | 515 x 380 x 500 mm |
| - Container quantity (20"/40"/40"HC) | 1088 2208 2760 |

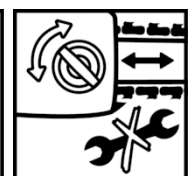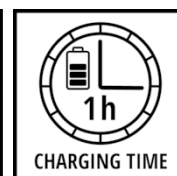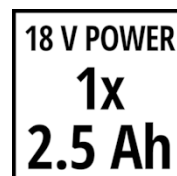

Available as special accessories



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



PXC Battery Protector
PXC-Battery Accessory
Item No.: 4140151
Bar Code: 4006825670844
Einhell Accessory



Ersatzkette 25cm 1,1 40T 3/8
Chain Saw Accessory
Item No.: 4501754
Bar Code: 4006825607024
Einhell Accessory



Ersatzschwert 25cm 1,1
Chain Saw Accessory
Item No.: 4501753
Bar Code: 4006825607017
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
C1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory




5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Battery-Running-Times

One Battery for All	
	sawing ¹ (pieces)
1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200
8.0 Ah	260

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm