



# Einhell

## CLASSIC



Cordless Lawn Trimmer

**GC-CLT 18/240 Li - Solo**

**Item No.: 4511138**

Ident No.: 21014

Bar Code: 4006825682755

With the Einhell cordless grass trimmer GC-CLT 18/240 Li-Solo, even hard-to-reach lawn areas in the garden can be shaped with ease. The cordless grass trimmer is a powerful member of the Power X-Change system range. The grass trimmer is equipped with a flower guard that protects flowers and ornamental plants from damage. The continuously telescopic guide handle can be adjusted to the user's height for ergonomic working. The cutting width of the blade is 24 cm. The package includes 20 plastic blades. The delivery does not include the Power X-Change battery or charger; these are available separately, for example, as a practical starter set.

## Features & Benefits

- Member of the Power-X-Change family, 1x 18 V battery necessary
- Telescopic long handle, infinitely adjustable
- User-friendly two-hand operation thanks to additional handle
- Fatigue-free and agile operation thanks to low weight
- Flower guard protecting plants against damage
- Incl. 20 plastic blades
- Supplied without battery and charger (available separately)

## Technical Data

- |                          |          |
|--------------------------|----------|
| - Revolutions of knife   | 8500 rpm |
| - Cutting width of knife | 24 cm    |

## Logistic Data

- |                                 |                    |
|---------------------------------|--------------------|
| - Product weight                | 1.25 kg            |
| - Gross weight single packaging | 1.8 kg             |
| - Dimensions single packaging   | 160 x 105 x 930 mm |
| - Pieces per export carton      | 4 Pieces           |
| - Gross weight export carton    | 8.4 kg             |
| - Dimensions export carton      | 950 x 335 x 230 mm |



FLOWER GUARD



 
TELESCOPIC



ADDITIONAL HANDLE



EASY HANDLING

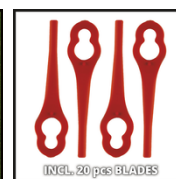


INCL. 20 pcs BLADES



BATTERY & CHARGER  
**NOT INCLUDED**



 TELESCOPIC

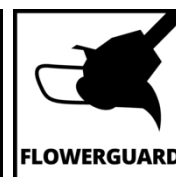

FLOWERGUARD



LOW WEIGHT  
EASY HANDLING

## Available as special accessories



Spare Blade-set PXC Trimmer  
Lawn Trimmer Accessory  
Item No.: 3405730  
Bar Code: 4006825560404  
Einhell Grey



5,2 Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



PXC 18V 3,0Ah  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



2,0 Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



4,0 Ah Power X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory

## Battery-Running-Times



trimming<sup>1</sup>  
(min.)

One Battery for All

1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

Test setup:

1) lawn