



Einhell

EXPERT

POWER X-CHANGE

Cordless Impact Drill

TE-CD 18/50 Li-i-Solo

Item No.: 4514019

Ident No.: 21014

Bar Code: 4006825682434

The Einhell cordless impact drill TE-CD 18/50 Li-i-Solo is equipped not only for screwing and drilling but also features a percussion drilling function. The two-speed gearbox provides a torque adjustable in 21 settings up to 50 Nm, allowing precise control over power when screwing and drilling. Thanks to its ergonomic design and soft grip, the cordless impact drill offers excellent handling. The 13 mm single-sleeve chuck quickly and easily accommodates the desired tool accessories. LED lighting ensures optimal visibility when working in dark areas. The tool is delivered without a battery and charger.

Features & Benefits


- Member of the Power X-Change family
- 2-speed gearbox for powerful drilling and screwing
- Impact drilling function for drilling in materials such as masonry
- Speed electronics for material & application-orientated work
- Optimum working in dark areas thanks to LED light
- Ergonomic design and soft grip for maximum manoeuvrability
- Supplied without battery and charger (sold separately)

Technical Data

- Number of gears 2
- Idle speed (gear 1) 0-400 min⁻¹
- Idle speed (gear 2) 0-1500 min⁻¹
- Max. torque hard 50 Nm
- Number of torque steps 21+1+1 settings
- Drill chuck 13 mm | single sleeve
- Drilling capacity in concrete 10 mm
- Impact rate (gear 1) 0-6400 min⁻¹
- Impact rate (gear 2) 0-24000 min⁻¹

Logistic Data

- Product weight 1.41 kg
- Gross weight single packaging 1.72 kg
- Dimensions single packaging 202 x 79 x 237 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 7.3 kg
- Dimensions export carton 340 x 253 x 220 mm
- Container quantity (20"/40"/40"HC) 5916 | 12256 | 13332

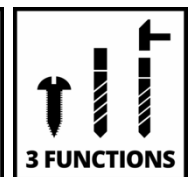

Available as special accessories



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
A1
Battery
Item No.: 4511489
Bar Code: 4006825638578

Power X-Caravan Charger 3A
Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



3er Set POWERBOX Kassetten
Akku-Schlagbohrmaschinen-
Zubeh
Item No.: 49109157
Bar Code: 4009311091574



Bit-Bohrerbox 22tlg. S-Box
Akku-Bohrschrauber-Zubehör
Item No.: 49108806
Bar Code: 4009311088062
Einhell Accessory



Bitsatz 34 tlg. S-Box
Akku-Bohrschrauber-Zubehör
Item No.: 49108801
Bar Code: 4009311088017
Einhell Accessory



Bit-Bohrerbox 39tlg. L-Box
Akku-Bohrschrauber-Zubehör
Item No.: 49108911
Bar Code: 4009311089113
Einhell Accessory



Bit-Bohrerbox 39tlg. L-Box
Akku-Bohrschrauber-Zubehör
Item No.: 49108956
Bar Code: 4009311089564
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory



4Ah PLUS PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512159
Bar Code: 4006825680331
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory




4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210

Battery-Running-Times

One Battery for All	 screwing ¹ (pieces)
1.5 Ah	230
2.0 Ah	310
2.5 Ah	380
3.0 Ah	460
4.0 Ah	620
5.2 Ah	780
6.0 Ah	910
8.0 Ah	1240

Test setup:

1) wood - 6x60 mm