



PROFESSIONAL



Cordless Demolition Hammer

TP-DH 18/4 Li BL - Solo

Item No.: 4514190

Ident No.: 21014

Bar Code: 4006825680645

The Einhell Professional Cordless Demolition Hammer TP-DH 18/4 Li BL-Solo is ideal for light chiselling and demolition tasks. With 4.0 J impact force, constant electronics, flexible battery power, adjustable impact rate, and a continuous operation lock, it removes concrete ridges, tiles, or plaster, making it perfect for renovations. Powered by an Einhell brushless motor for greater power and longer runtime. A 10-year motor warranty applies upon online registration. Thanks to the SDS-Plus chuck, chisels can be quickly changed and adjusted to 16 different positions. Includes pointed and flat chisels, plus E-Case. Battery and charger not included.

Features & Benefits

- Part of the Power X-Change family, 1x 18 V battery required
- Brushless motor more power and longer running time
- Brushless 10-year motor warranty with registration
- Compact, powerful demolition hammer for light chiseling work
- Variable impact rate control for material-specific work
- Vibration-damped handle for optimal use
- Flexibly adjustable auxiliary handle for more comfortable work
- 16-step chisel adjustment
- SDS-plus chuck with semi-automatic system
- Continuous operation lock for time-intensive tasks
- Integrated LED light to illuminate the work area
- Includes 1x pointed chisel and 1x flat chisel
- Delivered in a transport and storage case E-Case
- Comes without battery or charger (sold separately)

Technical Data

- Voltage 18 V

- Impact rate 0-4600 min^-1

4 J - Impact power

- Tool holder SDS-plus

Logistic Data

- Product weight (kg) 2.88 5.08 - Gross weight (kg)

441 x 328 x 130 mm - Dimensions single packaging

- Pieces per export carton 4 Pieces - Gross weight of export carton 24 kg

- Dimensions export carton 540 x 455 x 345 mm - Container quantity (20"/40"/40"HC) 1280 | 2640 | 3080











Available as special accessories



5,2 Ah Power X-Change Plus

Battery Item No.: 4511437

Bar Code: 4006825616606

Einhell Accessory



PXC+ 18V 4,0Ah Battery Item No.: 4511553

Bar Code: 4006825660869

Einhell Accessory



3,0 Ah Power X-Change Plus

Battery

Item No.: 4511501

Bar Code: 4006825644197

Einhell Accessory



4,0 Ah Power X-Change Battery Item No.: 4511396

Bar Code: 4006825610376

Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack

Battery

Item No.: 4511526 Bar Code: 4006825656695 Einhell Accessory



2x2 Power X-Quattrocharger 4A

Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069

Bar Code: 4006825629729

Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit

Item No.: 4512097 Bar Code: 4006825646962

Einhell Accessory



18V 2,0Ah PXC Starter Kit

PXC-Starter-Kit Item No.: 4512040

Bar Code: 4006825613681

Einhell Accessory



E-Case L with wheels E-Case L with wheels System Carrying Case Item No.: 4540014 Bar Code: 4006825660562 Einhell Accessory



System Carrying Case Item No.: 4540011 Bar Code: 4006825653991 Einhell Accessory



E-Case Werkzeugkiste System Carrying Case Item No.: 4540037

Bar Code: 4006825677973

Einhell Accessory



PXC+ 18V 5-8Ah MULTI

Battery Item No.: 4511600

Bar Code: 4006825665055

Einhell Accessory



PXC 18V 3,0Ah Battery Item No.: 4511341

Bar Code: 4006825590593 Einhell Accessory



2,0 Ah Power X-Change

Battery

Item No.: 4511395 Bar Code: 4006825610369

Einhell Accessory



4-6 Ah Multi-Ah Power X-Change

Battery

Item No.: 4511502 Bar Code: 4006825644210



2x18V 4,0Ah PXC-Twinpack CB

Battery Item No.: 4511489 Bar Code: 4006825638578



Power X-Fastcharger 4A

Charger Item No.: 4512103 Bar Code: 4006825650228

Einhell Accessory



Power X-Car Charger 3A

Charger Item No.: 4512113 Bar Code: 4006825655377

Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit

Item No.: 4512112 Bar Code: 4006825655766

Einhell Accessory



18V 4,0Ah PXC Starter Kit B1 PXC-Starter-Kit Item No.: 4512042

Bar Code: 4006825613704

Einhell Accessory



E-Case Tasche E-Case Tasche System Carrying Case Item No.: 4540036 Bar Code: 4006825677966 Einhell Accessory



System Carrying Case Item No.: 4540021 Bar Code: 4006825667721 Einhell Accessory

Battery-Running-Times

_	
_	
_	•

One Battery for All	chiseling¹ (min.)
1.5 Ah	11
2.0 Ah	15
2.5 Ah	19
3.0 Ah	23
4.0 Ah	30
5.2 Ah	39
6.0 Ah	45
8.0 Ah	60

For best performance select a battery with at least 2.5 Ah

1) brick stone - brick stone - Max. electronic speed