



# EXPERT

**Cordless Pruning Chain Saw** 

#### GE-PS 18/15 Li Bag Kit

Item No.: 4600043

Bar Code: 4006825682847

With its 12.5 cm cutting length, the Einhell cordless pruning chain saw GE-PS 18/15 Li Bag Kit is perfect for pruning and contour cutting of trees and shrubs, as well as for chopping garden waste and sawing squared timber with smaller cross sections. It can be combined with all Power X-Change batteries and chargers. The tool is driven by an Einhell Brushless motor for extra power and a longer running time. Once you register online, the brushless motor has a 10-year guarantee. The guide bar and the chain can be replaced without additional tools. The delivery includes a guide bar cover, an oil applicator, a hexagon key, a spare chain, an Einhell Bag 45/29, a 2.5 Ah battery and a charger.

# **Features & Benefits**

- Member of the Power X-Change family, 1x 18 V battery required
- Brushless motor more power and longer running time
- Brushless 10-year warranty on motor after registration
- Perfect for pruning and contour cutting trees and shrubs
- For chopping garden waste and cutting squared timber
- Low vibration thanks to high-efficiency motor
- Toolless replacement of guide bar and chain
- Safe use: Hand protection and foldable chain cover
- Hand rest surface with soft grip for two-handed use
- Sleek and lightweight design for ergonomic working
- Guide bar cover for safe storage
- Hexagon key for retightening the chain can be stored on the tool
- Incl. applicator for oiling the chain
- Incl. spare chain for chain replacement
- Incl. Einhell Bag 45/29
- Incl. 2.5 Ah Power X-Change battery and charger

# **Technical Data**

/
m/s
mm
mm

# Logistic Data

<ul> <li>Product weight (kg)</li> </ul>	
- Gross weight (kg)	

- Dimensions single packaging
- Pieces per export carton
- Gross weight of export carton
- Dimensions export carton
- Container quantity (20"/40"/40"HC)







### Available as special accessories

Ersatzkette 15cm 1,0 28T 7,62 Chain Saw Accessory Item No.: 4500174 Bar Code: 4006825673647 Einhell Accessory







5,2 Ah Power X-Change Plus

Battery Item No.: 4511437 Bar Code: 4006825616606 **Einhell Accessory** 

3,0 Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 **Einhell Accessory** 

4,0 Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 **Einhell Accessory** 



2x18V 4,0Ah PXC-Twinpack CB B1 Battery Item No.: 4511489 Bar Code: 4006825638578



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory





Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 **Einhell Accessory** 

18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory

















18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 **Einhell Accessory** 

18V 4,0Ah PXC Starter Kit B1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 **Einhell Accessory** 

## **Battery-Running-Times**

One Battery for All	sawing <sup>1</sup> (pieces)
1.5 Ah	95
2.0 Ah	127
2.5 Ah	158
3.0 Ah	190
4.0 Ah	254
5.2 Ah	329
6.0 Ah	380
8.0 Ah	506

#### Test setup:

1) softwood - round soft wood Ø 50 mm









Item No.: 4511395 Bar Code: 4006825610369 **Einhell Accessory** 4-6 Ah Multi-Ah Power X-Change

Ersatzschwert 15cm 1,0

Bar Code: 4006825672503

Bar Code: 4006825590593

2,0 Ah Power X-Change

Chain Saw Accessory Item No.: 4500163

Einhell Accessory

PXC 18V 3,0Ah Battery Item No.: 4511341

**Einhell Accessory** 

Battery

Plus Battery Item No.: 4511502 Bar Code: 4006825644210

2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory

Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729

Einhell Accessory











