



Einhell

PROFESSIONAL



Cordless Chain Saw

GP-LC 36/40 Li BL-Solo

Item No.: 4600050

Ident No.: 21013

Bar Code: 4006825678406

Features & Benefits

- Member of the Power X-Change family, 2x 18 V battery required
- Twin-Pack technology: 2x18V Power X-Change batteries - more power
- Brushless motor - more power and longer running time
- PurePOWER Brushless - 10-year motor warranty after registration
- Toolless chain tensioning and chain change
- Robust OREGON quality blade and sharp chain
- Powerful with over 19 m/s and felling handle for professional use
- Perfectly balanced battery positioning
- Lateral positioning of the battery for optimum protection
- Automatic chain lubrication
- Charge status indicator with LED for reading the battery capacity
- Ergonomic handle with soft grip
- Solid metal claw fence
- Oil reservoir with gauge glass for automatic chain lubrication
- Kickback protection and instant chain brake
- Chain catch pin to protect the user
- Recommendation for optimum results: 2x 5.2 Ah battery and larger
- Supplied without battery and charger (sold separately)



Technical Data

- | | |
|-----------------------|--------|
| - Sword length | 400 mm |
| - Max. cutting length | 38 cm |
| - Chain cutting speed | 19 m/s |
| - Oil tank capacity | 230 mL |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 4.76 kg |
| - Gross weight (kg) | 5.76 kg |
| - Dimensions single packaging | 275 x 520 x 245 mm |
| - Pieces per export carton | 2 Pieces |
| - Gross weight export carton | 11.5 kg |
| - Dimensions Export Carton | 540 x 525 x 290 mm |
| - Container quantity (20"/40"/40"HC) | 616 1232 1408 |



Available as special accessories

	Spare bar BG-PC 4040 Chain Saw Accessory Item No.: 4500156 Bar Code: 4006825548778 Einhell Accessory		4-6 Ah Multi-Ah Power X-Change Plus Battery Item No.: 4511502 Bar Code: 4006825644210
	18V 2,5Ah PXC Starter-Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory		4,0 Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory
	18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory		2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory
	Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory		2x 5,2Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512108 Bar Code: 4006825652376 Einhell Accessory
	Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory		18V 3,0 Ah Power-X-Change 1 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory
	Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory		2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766 Einhell Accessory
	2x 18V 5,2Ah PXC-Twinpack Battery Item No.: 4511526 Bar Code: 4006825656695 Einhell Accessory		5,2Ah & 4A Fastcharger PXC-Starter-Kit Item No.: 4512114 Bar Code: 4006825656787 Einhell Accessory
	PXC Battery Mounting Gadget PXC-Battery Accessory Item No.: 4514155 Bar Code: 4006825658774 Einhell Accessory		2x18V 4,0Ah PXC-Twinpack CB A1 Battery Item No.: 4511489 Bar Code: 4006825638578
	18V 5-8Ah Multi-Ah PXC Plus Battery Item No.: 4511600 Bar Code: 4006825665055 Einhell Accessory		18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit Item No.: 4512143 Bar Code: 4006825667653 Einhell Accessory
	Power X-Boostcharger 8A Charger Item No.: 4512155 Bar Code: 4006825670554 Einhell Accessory		5,2 Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory
	18V 4,0Ah Power-X-Change Plus Battery Item No.: 4511553 Bar Code: 4006825660869 Einhell Accessory		18V 4,0Ah SEALED PXC Plus A1 Battery Item No.: 4511627 Bar Code: 4006825673227 Einhell Accessory
	18V 4Ah PXC Plus Twinpack Battery Item No.: 4511629 Bar Code: 4006825673685 Einhell Accessory		18V 3Ah PXC Plus Twinpack Battery Item No.: 4511631 Bar Code: 4006825673692 Einhell Accessory
	2,0 Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory		18V Battery Charger 3,0A - PXC Charger Item No.: 4514095 Bar Code: 4006825655292 Einhell Accessory
	18V 3,0Ah SEALED PXC Plus A1 Battery Item No.: 4511618 Bar Code: 4006825672794 Einhell Accessory		3,0 Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory

Battery-Running-Times



cutting¹
(pieces)

One Battery for All

1.5 Ah	81
2.0 Ah	108
2.5 Ah	134
3.0 Ah	159
4.0 Ah	212
5.2 Ah	276
6.0 Ah	319
8.0 Ah	425

For best performance select a battery with at least 5.2 Ah

Test setup:

1) wood - scantling 70x70 mm