



Einhell

EXPERT

POWER X-CHANGE

Cordless Coffee Maker

TE-CF 18 Li-Solo

Item No.: 4609990

Ident No.: 21023

Bar Code: 4006825672510

With the Einhell cordless coffee maker TE-CF 18 Li-Solo, you can enjoy fresh coffee anywhere. As part of the Power X-Change family, it can be used in combination with any battery or charger from the system. The cordless coffee maker enables quick preparation of filter coffee or commercial coffee pads in about 5 minutes, has a removable 240 ml water tank and comes with a dustproof stainless-steel coffee cup with lid. Lightweight and portable thanks to its carrying handle, it is perfect for on the go. Its rubber feet ensure stability. It comes with a measuring spoon, a ground coffee container with filter, and a coffee pad holder. Comes without battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- 2-in-1: filter coffee machine and coffee pad machine in one
- Coffee making at max. 80 °C for optimum enjoyment
- Removable 240 ml water tank for one cup of coffee
- For cups up to 90 mm height
- Easy transport thanks to integrated handle
- Cup holder prevents the cup from falling out during transport
- Rubber feet for secure standing
- Incl. stainless steel coffee cup with dust-proof lid
- Incl. dosing spoon
- Incl. coffee powder container with 1 x coffee filter
- Incl. container for commercially available coffee pads
- Supplied without battery and charger (sold separately)




Technical Data

- | | |
|---------------|--------|
| - Tank volume | 0.24 L |
|---------------|--------|

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 1.17 |
| - Gross weight (kg) | 1.74 |
| - Dimensions single packaging | 322 x 185 x 267 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight of export carton | 9.7 kg |
| - Dimensions export carton | 655 x 380 x 282 mm |
| - Container quantity (20"/40"/40"HC) | 1632 3360 3780 |

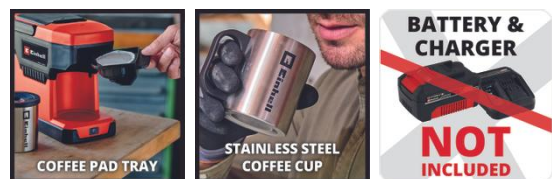

Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



Power X-Caravan Charger 3A Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 4,0Ah Power-X-Change Plus Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



Coffee Cup TE-CF 18 Li-Solo Coffee Machine/Water Cooker Ac
Item No.: 4609991
Bar Code: 4006825672831
Einhell Accessory



18V 4Ah PXC Plus Twinpack Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



3,0 Ah Power X-Change Plus Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



Power X-Boostcharger 8A Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



PXC Battery Protector PXC-Battery Accessory
Item No.: 4140151
Bar Code: 4006825670844
Einhell Accessory



18V 3,0Ah SEALED PXC Plus A2 Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



18V 4,0Ah SEALED PXC Plus A1 Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2,0 Ah Power X-Change Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578